

**MIDI Pedal Converter MPC-10/MPC-20
Compatible Pedal Models**

No.	Pedal Type	Models/Name	Remarks
1	Expression Pedal	M-Audio EX-P Expression Pedal	Please place the pedal in the middle area and then connect it to the MIDI Pedal Converter for better recognition range.
2		Roland EV-5 Expression Pedal	
3		Roland DP-10	
4		AKAI Expression Pedal	
5		Nektar NX-P Pedal	
6		On-Stage KEP100	
7		KORG Exp-2 Pedal	
8		YAMAHA FC-7 Expression Pedal	
9		VALETON EP-2	
10	Switch Pedal	M-Audio SP-2	
11		YAMAHA FC3A Sustain Pedal	
12		YAMAHA FC4A Sustain Pedal	
13		YAMAHA FC5A Sustain Pedal	
14		YAMAHA FC5 Foot Switch Style Sustain Pedal	
15		Other Sustain Pedals	
16	Dual Switch Pedal	Lead Foot FS-2	It is a self-locking switch. Both switches need to be disconnected and then connected to the MIDI Pedal Converter.
17		MOSKY DUAL SWITCH	
18		Fishman Dual Foot Switch	
19		Common TRS double switch pedal	
20		BOSS DUAL FOOT SWITCH FS-7	Need to press the FS-7 pedal and then connect it to the EXP port of the product. Please do not power the FS-7.
21	Hi-Hat Pedal	Roland FD-1	
22		Roland FD-8	
23		Roland FD-9	
24		NUX Hi-Hat Kick Pedal	
25		YAMHAAH HH65	
		...	

Incompatible Models

No.		Models	Reason
1	Expression Pedal	F10H Kawai sustain pedal	This pedal needs power, not an analog pedal
2			
3			

Note1: The above are only some known pedal models/Name.

Note2: MPC-10/20 supports a 6.35mm plug, which can be connected to a positive expression pedal, a reverse polarity expression pedal, a sustain pedal, a dual-switch pedal, and an electronic drum hi-hat.